

## RadioLink T8S Radio Transmitter/Receiver Setup

---

### Driver Installation:

Open the CH340\_Driver folder  
Run the DRVSETUP64 application (You will have to allow the app to make changes to your device)  
Make sure CH31SER.INF is selected from the drop-down menu at the top of the setup app  
Press the INSTALL button  
The drivers will be successfully installed in a few moments (a pop-up will confirm successful installation)

### Transmitter Configuration Setup:

Plug your T8S transmitter into your computer using the provided USB cable (or any other USB-A to microUSB cable)  
Press and hold the center button on the transmitter until it beeps and green lights above the button turn on  
Open the Radiolink\_parameter\_setting\_software\_V4.2 folder  
The software requires no installation, run the Radiolink\_parameter\_settings application  
In the drop-down menu next to the large OPEN button at the top of the program, select the correct transmitter port  
The port will be named COM followed by a number (the number will vary from computer to computer)  
Press the OPEN button, your transmitter should begin to beep  
On the transmitter, press any one of the subtrim buttons (the small buttons with arrows on them)  
The beeping will stop, and your transmitter will be connected to the configuration program  
Confirm your transmitter is connected by moving one of the sticks on the transmitter, you should see the program change

### Switching From Mixed Configuration to Tank Configuration:

Connect your transmitter to the provided configuration software (see above)  
Press the large LOAD button at the top of the program  
A file-select window will pop-up, open the folder named "configurations"  
Select the file named t8s\_tank and press open  
Press the large WRITE button at the top of the program, your transmitter will beep 3 times  
Your transmitter is now in the Tank Configuration

To switch back to the original mixed configuration, repeat above steps except select the file named t8s\_mixed