




Zip tie motors
& wires to
chassis

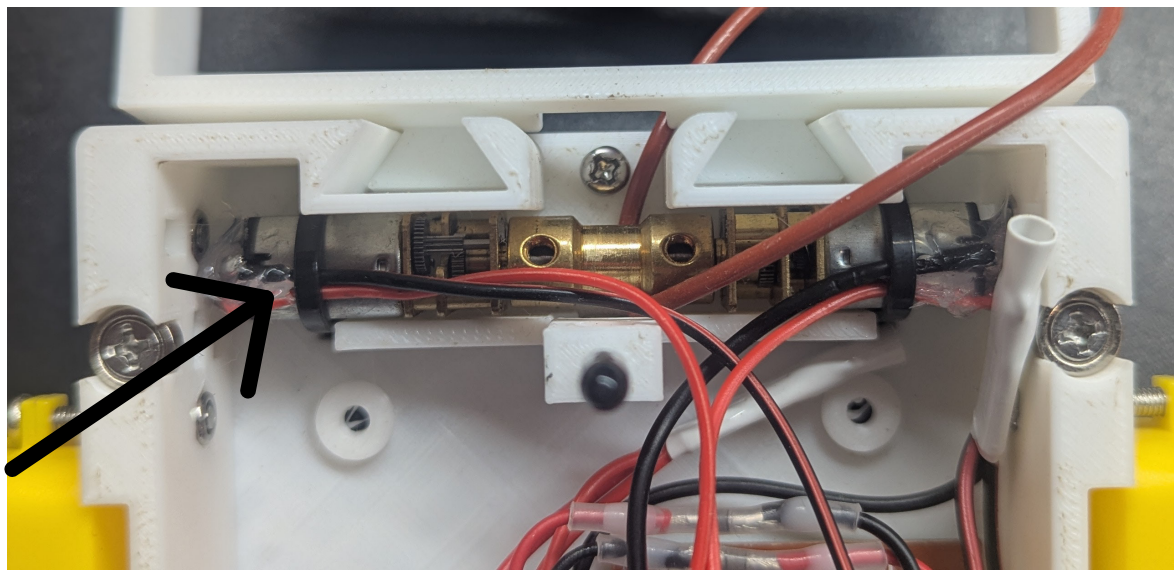

Upside down
bar for
vertical &
drum. Use
shaft & orange
collar

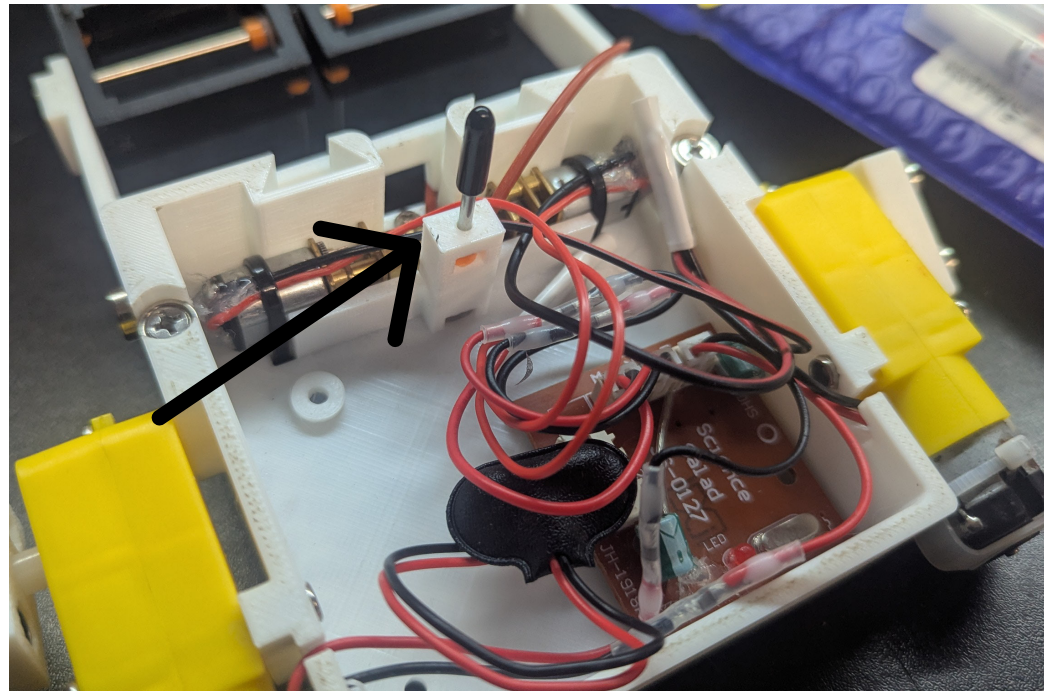


Caster spacer
to keep
vertical &
drum teeth
clear from the
ground

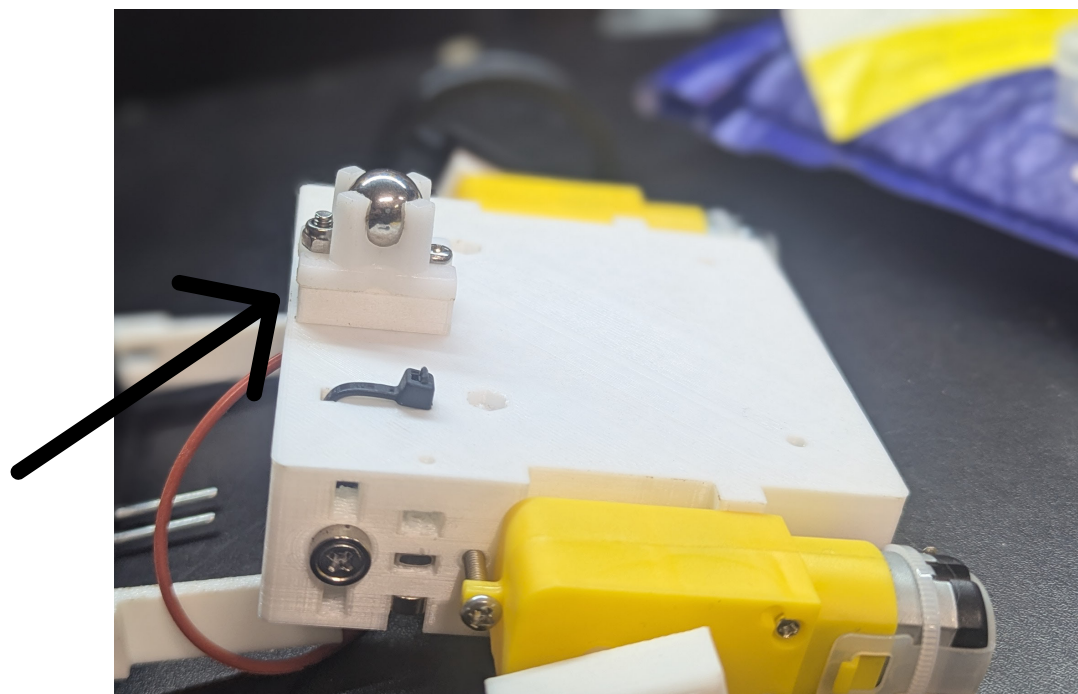

Armor now
used one
magnet to
attache to
chassis

Use square
nut to attach
lid magnet to
chassis

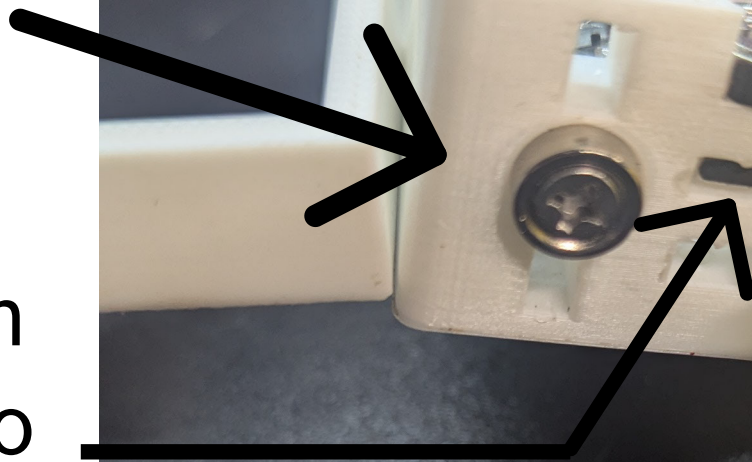

Magnet wheels

