



Zip tie motors  
& wires to  
chassis or just  
zip tie wire to  
motors for  
quick change

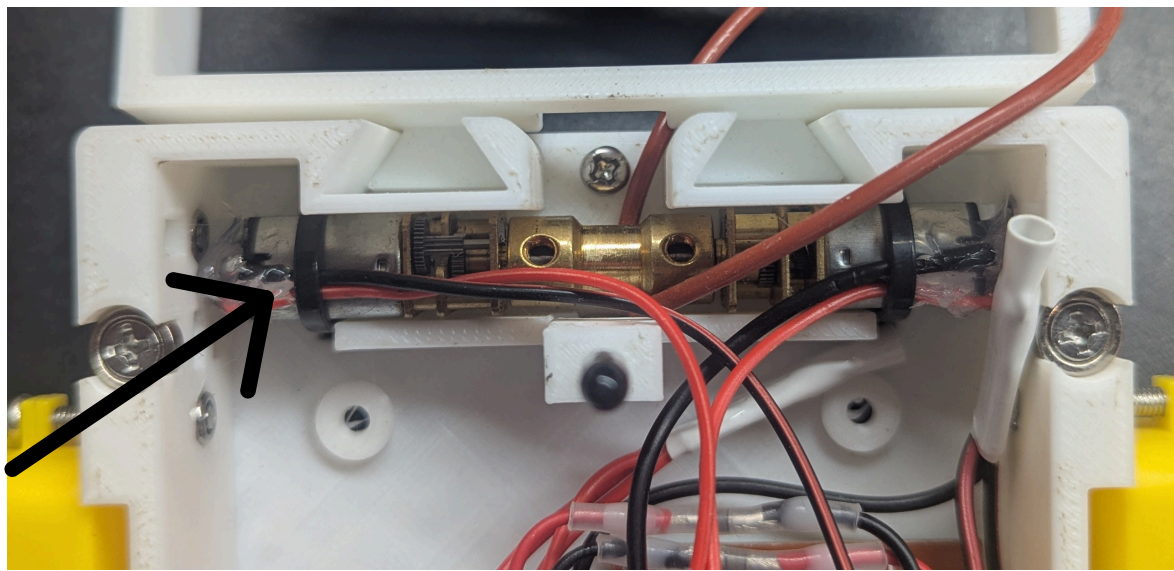

Upside down  
bar for  
vertical &  
drum. Use  
shaft & orange  
collar

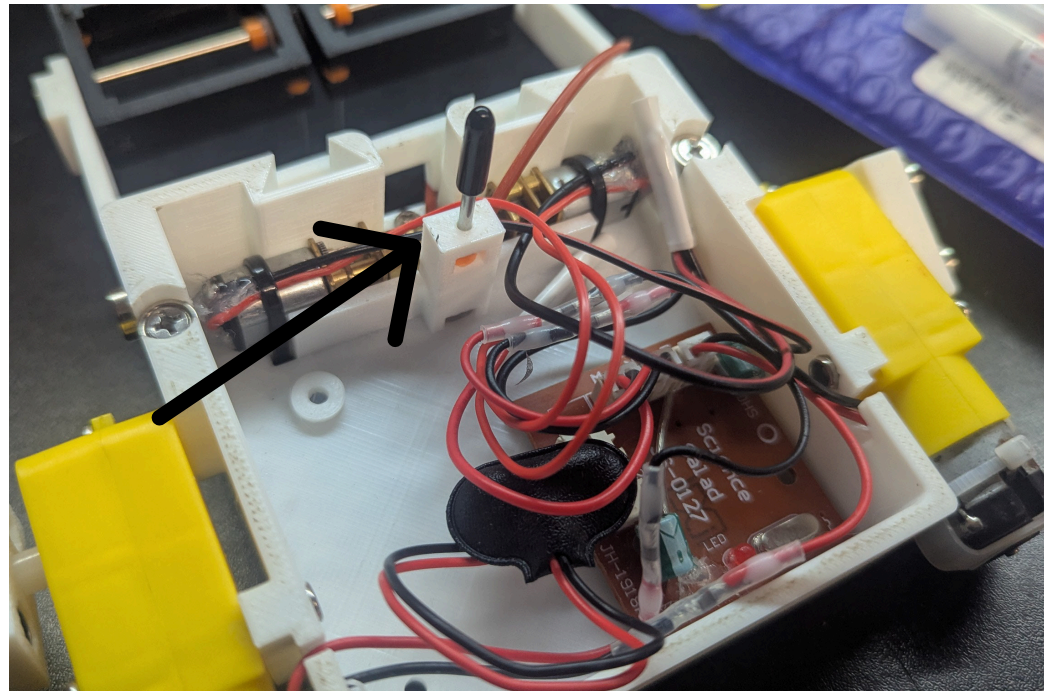

Caster spacer  
to keep  
vertical &  
drum teeth  
clear from the  
ground

1st hole

