1: Clean supports

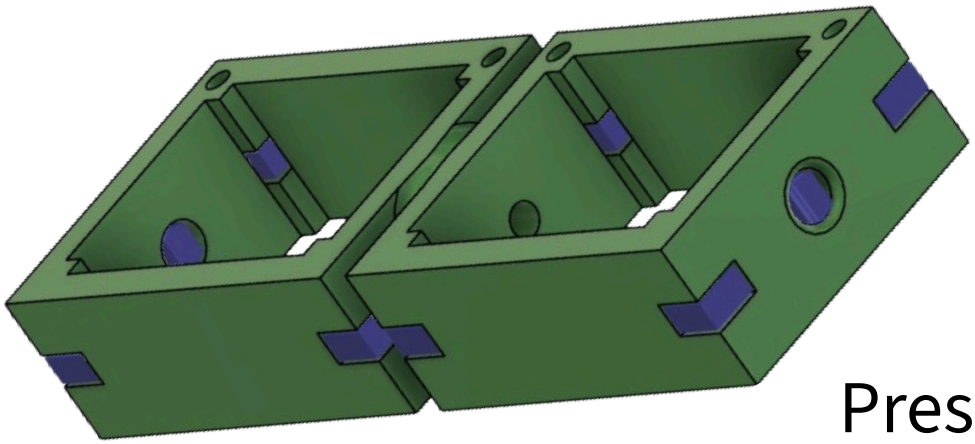

Press into side of drum
(Crazy glue optional)

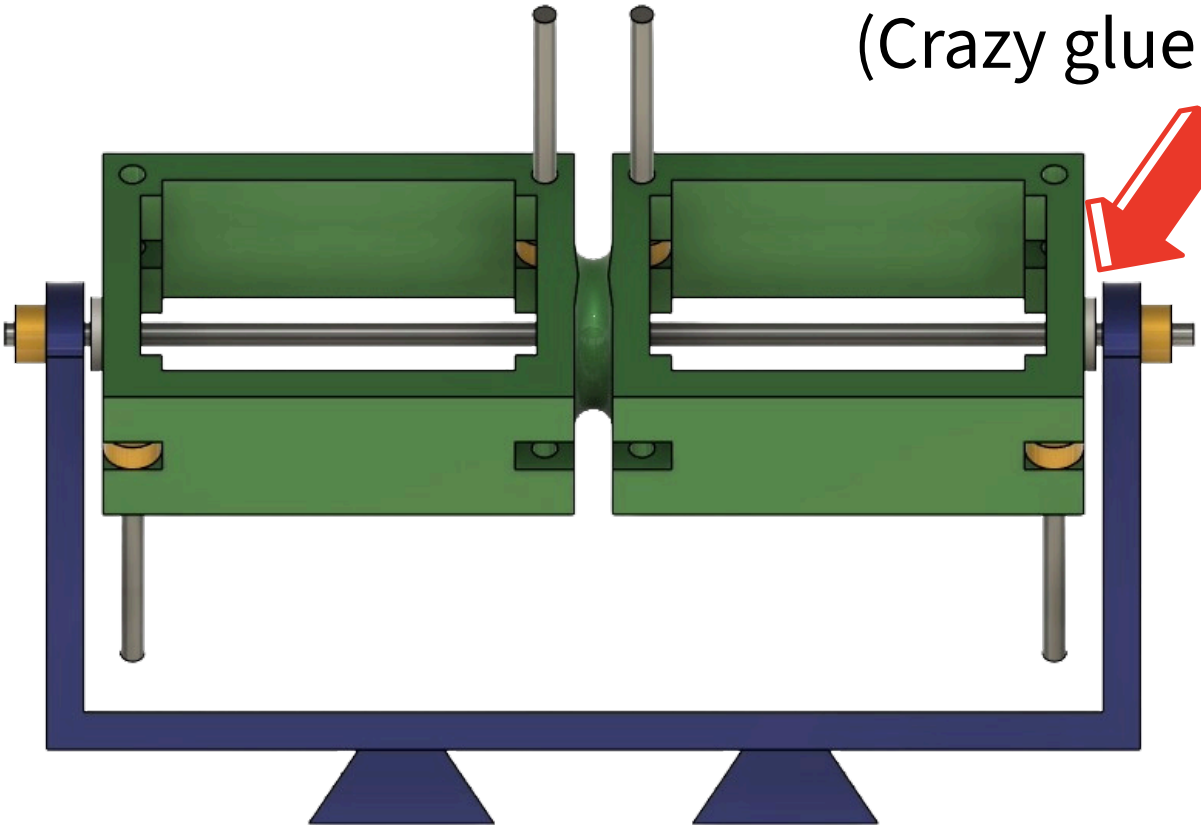
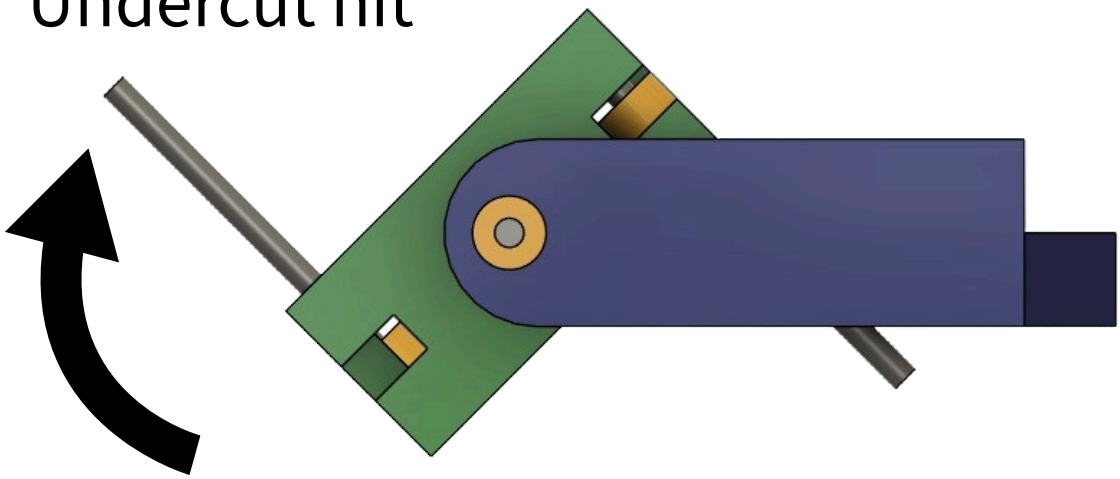
Undercut hit